

27 June 2019

Tensa Solo revised setup note

Tensa Solo originally joined the topmost tubing segment, the tarp extension, using a small pushpin attached to a cord. We no longer use this method due to widespread misunderstanding of the function of the pin. This note describes the new method, appending the formal illustrated documentation until we revise it.

The topmost section now connects using a spring button like every other section. As before, the hammock attachment loop is lark's headed around the tubing. Instead of the loop resting on the pushpin, we now recommend resting it snugly at the base of the topmost section, where it joins the next larger tube

The guylines rest on top of the hammock connection loop.



— Todd & Cheryl